




INSTALLATION & OPERATIONS MANUAL

CP SERIES SIMPLEX PUMP CONTROL PANEL CP16AXXX1XX

IMPORTANT:

Completely read and thoroughly understand these instructions before proceeding to install and wire the control panel.

For assistance contact your local distributor or Gems Sensors Inc. directly

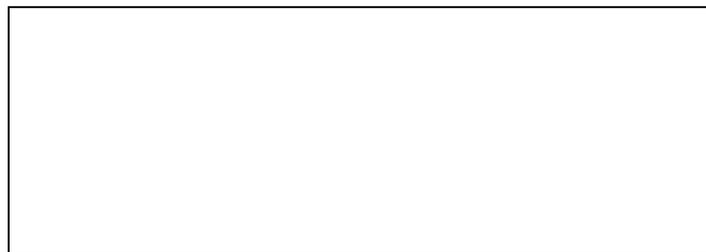

or directly at

Gems Sensors Inc.

One Cowles Road Plainville, CT 06062
(860)793-4579 FAX(860)793-4580

www.gemssensors.com

www.warrick.com

INSTALLATION INSTRUCTIONS

IMPORTANT: Completely read and thoroughly understand these instructions before proceeding to install and wire the control. This manual is a generic guide and may not be specific to the panel provided. Refer to the part number for specific options chosen.

Mount control box vertically on wall or other solid structure. The maximum distance between the control box and the location of the electrodes is determined by the sensitivity of the 16M control(s). This information is supplied on Form 167 P/N 100212-1.

WIRING INSTRUCTIONS

Connect ground terminal provided on the back panel of the enclosure to electrical ground.

Caution: Bonding between conduits must be made.

All conduit entrances must be grounded via the ground terminal provided on the back pane and to any external metal parts that may become energized.

Circles with diagonals  on wiring diagram represent terminals provided for external connections. Connections to these terminals should be made using UL approved crimp type spade lugs. Maximum allowable connections per terminal is 2.

Recommended wire type is 14 or 16 AWG THHN or MTW.

NOTE: All wiring shall be in accordance with the National Electrical Code.

Connect terminal pair 1 – 2 to AC supply line of electrical characteristics indicated on data label and drawing. Fuse protection has not been provided. Do not exceed electrical characteristics indicated on data label and drawing.

Connect terminals pair 3 – 4 into the motor starter circuit of the pump. This circuit not to exceed 3AMP @ 120 VAC.

Connect terminals pair 5 – 6 into the circuit of the remote HIGH level alarm device. This circuit not to exceed 3AMP @ 120 VAC.

Connect terminals pair 7 – 8 into the circuit of the remote LOW level alarm device. This circuit not to exceed 3AMP @ 120 VAC.

Terminal pairs 3 – 8 are isolated load contacts and must be wired in series with its load and that series branch circuit connected across a power source compatible with the load.

Electrode Wiring

Wiring must be provided to the electrodes as shown on the drawing provided. The electrode wiring should be thermoplastic insulated and be installed in a separate dry metallic conduit. Terminal 16 must be grounded to the vessel if metallic. If the electrode fitting used has a metallic body and is supported directly upon a metallic vessel, the ground connection is facilitated by securing that end of the ground conductor beneath the head of one of the screws which fasten the terminal housing to the body of the fitting. *When the vessel is non-metallic, terminal 16 must be connected to an additional electrode of length equal to or longer than, the longest electrode.*

Float Switch Wiring

Wiring must be provided to the float switches as shown on the drawing provided. The float switches wiring should be thermoplastic insulated and be installed in a separate dry metallic conduit.

Connect terminals 9 and 10 to the normally open HIGH level float switch.

Connect terminals 11 – 14 to the normally open pump start and stop float switches based on the pumping operation (i.e. pump down).

Connect terminals 15 and 16 to the normally open LOW level float switch.

OPERATING INSTRUCTIONS

A Hand-Off-Automatic selector switch is provided for the pump so that it can be operated automatically or manually. To energize the pump, turn the switch to the “Hand” position. To de-energize the pump, turn the switch to the “Off” position. This switch will normally be in the “AUTO” position and operation will then be as follows.

If the tank level rises to the HIGH LEVEL electrode or float, the High level alarm light will illuminate.

If the audible alarm option was chosen the following will also occur. The audible alarm horn will sound and the contacts connected to terminal pair 5 – 6 will close. The contact will remain closed until the high level condition is corrected.

The audible alarm can be silenced by momentarily depressing the SILENCE pushbutton, however, the light will remain on until the abnormal condition is corrected.

A green PUMP RUNNING light is provided on the door of the control panel and will energize when the pump is called for.

Pump Down

The pump will be started when the tank level rises to the pump START electrode or float and will continue in operation until the level is reduced below pump STOP electrode or float.

Pump Up

The pump will be started when the tank level recedes below the pump START electrode or float and will continue in operation until the level is rises to the pump STOP electrode or float.

If the tank level rises to the LOW LEVEL electrode or float, the Low level alarm light will illuminate.

If the audible alarm option was chosen the following will also occur. The audible alarm horn will sound and the contacts connected to terminal pair 7 – 8 will close. The contact will remain closed until the high level condition is corrected.

The audible alarm can be silenced by momentarily depressing the SILENCE pushbutton, however, the light will remain on until the abnormal condition is corrected.